

# SPACER FOR SCUNTION PLASTERING



## Important notices:

- When performing the installation, it is necessary to observe all the principles of work safety, especially the use of protective equipment /goggles, gloves, helmet.../ compliance of OHS when working at heights, etc.
- The spacer must only be used for the purpose for which it was designed and only in accordance with the instructions for use.

## Instructions:

- Place the weighting laths adjusted to the size of the hole / scuntions into this hole and measure their spacing.
- Set the spacer length 10 mm longer than the found spacing and secure with the screw
- Adjust the laths by loosening the spacer partially by pulling, thus reducing the pressing force of the spacer to the lath, which can then be freely adjusted to the desired position. Then release the spring member and the lath will automatically fix itself again.

## Maintenance instructions:

- Immediately after finishing the work with the spacer, wipe or remove any residual impurities from the spacer.
- Then preserve the spacer gently with oil.

